# NJ5□, NJ3□, NJ1□

# NJ series machine controller


# Sysmac controller - NJ series

The NJ series is an scalable machine controller for logic sequence and motion control that includes options for advanced functions such as robotics and database connection.

- Fastest cycle time: 500 μs
- Number of axes: 64, 32, 16, 8, 4, 2
- Synchronized motion core
- Functions: Logic sequence, Motion, Robotics, Database connection and SECS/GEM
- Up to 8 Delta robot control
- DB connection: SQL client for Microsoft SQL server, Oracle, IBM DB2, MySQL, Firebird
- Multi-tasking
- Built-in EtherCAT and EtherNet/IP ports

# System configuration



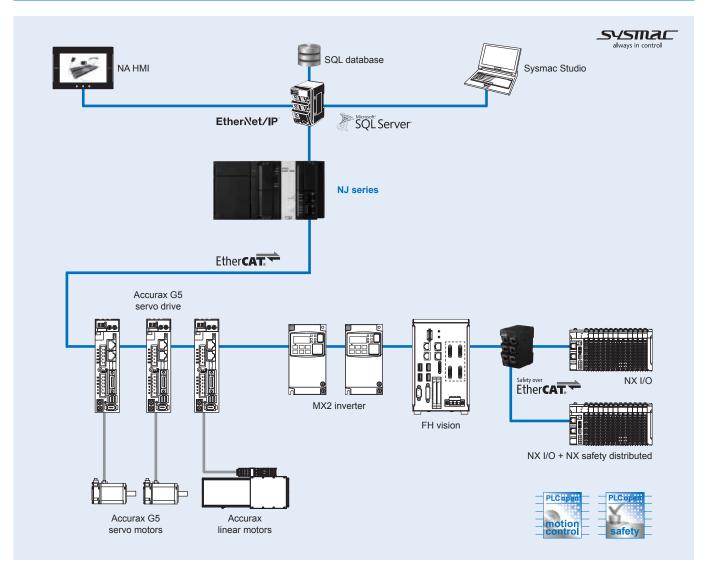

# Specifications

# **General specifications**

Item		NJ CPU Unit
Enclosure		Mounted in a panel
Grounding		Less than 100 $\Omega$
CPU unit dimensions (H × D × W)		90 mm × 90 mm × 90 mm
Weight		550 g (including end cover)
Current consumption		5 VDC, 1.90 A (including SD Memory card and end cover)
Operation environment	Ambient operating temperature	0 to 55°C
	Ambient operating humidity	10% to 90% (with non condensation)
	Atmosphere	Must be free from corrosive gases
	Ambient storage temperature	-20 to 75°C (excluding battery)
	Altitude	2,000 m or less
	Pollution degree	2 or less: Conforms to JIS B3502 and IEC 61131-2.
	Noise immunity	2 kV on power supply line (conforms to IEC 61000-4-4.)
	Overvoltage category	Category II: Conforms to JIS B3502 and IEC 61131-2
	EMC immunity level	Zone B
	Vibration resistance	Conforms to IEC60068-2-6 5 to 8.4 Hz with 3.5 mm amplitude, 8.4 to 150 Hz. Acceleration of 9.8 m/s <sup>2</sup> for 100 min in X, Y and Z directions (10 sweeps of 10 min each = 100 min total)
	Shock resistance	Conforms to IEC60068-2-27 147 m/s <sup>2</sup> , 3 times in X, Y and Z directions (100 m/s <sup>2</sup> for relay output units)
Battery	Life	5 years at 25°C
	Model	CJ1W-BAT01
Applicable standards		Conforms to cULus, NK, LR, EC directives, C-Tick and KC registration <sup>*1</sup> .

<sup>\*1.</sup> Supported only by the CPUs with unit version 1.01 or higher.

# Performance specifications

# **Common performance specifications**

ltem				NJ5□ CPU Unit         NJ3□ CPU Unit         NJ1□ CPU Unit           10 mg         0.0 mg         0.0 mg         0.0 mg			
Processing speed	Execution time		er diagram instructions AND, OR and OUT)	1.9 ns	3.0 ns	3.3 ns (5.0 ns max.)	
-		Math	instructions (LREAL)	26 ns	42 ns	70 ns	
Programming	ramming Program	Size		20 MB	5 MB	3 MB	
capacity <sup>*1</sup>	POU	definition	3,000	750	450		
		POU	instance		3,000 (Sysmac Studio v.1.05 or higher) / 1,500 (Sysmac Stu- dio v.1.04 or lower)	1,800	
	Variables capacity	No re	tain attribute <sup>*2</sup>	Size: 4 MB Number: 90,000	Size: 2 MB Number: 22,500		
		Retai	n attribute <sup>*3</sup>	Size: 2 MB Number: 10,000	Size: 0.5 MB Number: 5,000 (Sysmac Stu- dio v.1.05 or higher) / 2,500 (Sysmac Studio v.1.04 or low- er)	Size: 0.5 MB Number: 5,000	
	Data type	Numb	per	2,000	1,000	•	
	Memory for	CIO a	rea	6,144 words (CIO 0 to CIO 614	13)		
	CJ-Series	Work	area	512 words (W0 to W511)			
spe	units (can be	Holdi	ng area	1,536 words (H0 to H1535)			
	specified with AT specifica-	DM area		32,768 words (D0 to D32767)			
	tions for vari-		rea	32,768 words × 25 banks (E0_00000 to E18_32767)	32,768 words × 4 banks (E0_00000 to E3_32767)		
Unit configura- tion	Maximum num	ber of connectable CJ units		Maximum per CPU rack or expansion rack: 10 units Maximum number of units per system: 40 units			
	Number of exp	ansio	n racks	3 max.			
	I/O Capacity (C	J unit	s)	2,560 points max.			
	Power supply	Mode	1	NJ-P[]3001			
	to CPU rack and expan- sion racks	OFF n time	AC power supply	30 to 45 ms			
		Power OFF detection time	DC power supply	22 to 25 ms			
cont	Number of controlled axes	Number of real axes <sup>*4</sup>		NJ501-□5□0: 64 axes max. NJ501-□4□0: 32 axes max. NJ501-□3□0: 16 axes max.	NJ301-1200: 8 axes max. NJ301-1100: 4 axes max.	NJ101-1000: 2 axes max. NJ101-9000: 0	
		Number of total axes <sup>*5</sup>		NJ501-□5□0: 64 axes max. NJ501-□4□0: 32 axes max. NJ501-□3□0: 16 axes max.	NJ301-1200: 15 axes max. NJ301-1100: 15 axes max.	NJ101-1000: 6 axes max. NJ101-9000: 0	
		Linear interpolation control		4 axes max. per axes group			
		Circu	lar interpolation control	2 axes per axes group			
	Number of axe	s grou	ips	32 groups max.			
	Position units			Pulses, millimeters, micromete	rs, nanometers, degrees or inch	es	

Item				NJ5 CPU Unit	NJ3 CPU Unit	NJ1 CPU Unit					
Motion control	Override facto	rs		0.00% or 0.01% to 500.00%		•					
	Motion control			Same as process data commu	nications period of EtherCAT	communications					
	Cams					table / 262,140 points max. for all					
	Callo	Number of cam data points		ble / 1,048,560 points max. for all cam tables							
		Numb	per of cam tables	640 tables max.	160 tables max.						
Communications	Peripheral	Supp	orted services	Sysmac Studio connection							
	USB port	Physical layer		USB 2.0-compliant B-type con	nector						
			mission distance	5 m max.							
	Built-in		ical layer	10 Base-T or 100 Base-TX							
	EtherNet/IP		a access method	CSMA/CD							
	port	Media access method Modulation		Baseband							
		Topo		Star							
		Baud		100 Mbps (100Base-TX)							
			mission media	STP (shielded, twisted-pair) ca		e or higher					
		Trans	mission distance	100 m max. (distance between	Ethernet switch and node)						
		Cascade connections number		There are no restrictions if an s	switching hub is used						
			Number of connections	32							
			Packet Interval <sup>*6</sup>	10 to 10,000 ms in 1.0-ms incr	ements."						
		ŝ			<ol> <li>Data will be refreshed at th</li> </ol>	e set interval, regardless of the					
		ж(s		number of nodes.)							
		il a li	Permissible	3,000 pps <sup>*8 *9</sup> (including hearth	peat)						
		cat	communications band								
		ani.	Number of tag sets	32							
		дTa	Tag types	Network variables (CIO, Work,	Holding, DM and EM Areas.)						
		ë E	Number of tags	8 (7 tags if controller status is included in the tag set.)							
		S S	Link data size per node	19,200 bytes max. (total size for							
		Synin expension Synin expension Permissible communications band Number of tag sets Tag types Number of tags Link data size per node Data size per connection Number of registrable tag Synin expension Number of registrable tag Number of registrable tag		600 bytes max.							
		리장	Number of registrable tag	32 max. (1 connection = 1 tag set)							
		-	sets								
			Tag set size	600 bytes max. (two bytes are	used if controller status is incl	luded in the tag set.)					
			Multi-cast packet filter*10	Supported.							
		ë	Class 3	32 (clients plus server)							
		:IP message service: Explicit messages	je service lessages	ge service lessages	ge service lessages	ge service lessages	ge service Iessages	(number of connections)			
			UCMM (non-connection type)	Number of clients that can con Number of servers that can con							
	Built-in	Numh	per of TCP socket service	30 max. <sup>11</sup>							
			nunications standard	IEC 61158, Type 12							
			CAT master	Class B (feature pack motion c	control compliant)						
			fications								
			ical layer	100BASE-TX							
			lation	Baseband							
		Baud		100 Mbps (100BASE-TX)							
			ex mode								
				Automatic							
		Topol		Line, daisy chain and branching Twisted-pair cable of category 5 or higher (double-shielded straight cable with aluminum tape							
		Trans	mission media	and braiding)	5 or higher (double-shielded s	straight cable with aluminum tape					
		Trans	mission distance	Distance between nodes: 100	mmay						
			per of slaves	192 max.	in max.	64 max					
					Way and the maximum	64 max.					
			ess data size			umber of process data frames is 4					
			ess data size per slave	Inputs/Outputs: 1,434 bytes ma							
			nunications period	500/1,000/2,000/4,000 μs	1,000/2,000/4,000 μs						
		Sync	jitter	1 μs max.							
nternal clock				At ambient temperature of 55°							
				At ambient temperature of 25°C							
				At ambient temperature of 0°C	: -3 to +1 min error per month	ו					

\*1. This is the capacity for the execution objects and variable tables (including variable names).

\*2. Words for CJ-series units in the CIO and work areas are not included.

<sup>\*3.</sup> Words for CJ-series units in the holding, DM and EM areas are not included.

<sup>\*4.</sup> This is the total number of axes that are set as servo axes or encoder axes and are also set as used axes.

\*5. This is the total for all axis types. The maximum number of TCP socket service of the CPU unit version 1.05 or lower is 8 axes (NJ301-1200), 4 axes (NJ301-1100).

<sup>\*6.</sup> Data is updated on the line in the specified interval regardless of the number of nodes.

\*7. The packet interval of the CPU unit version 1.02 or lower is 10 to 10,000 ms in 1.0 ms increments.

<sup>\*8.</sup> Means packets per second, i.e., the number of communication packets that can be sent or received in one second.

\*9. The permissible communications band of the CPU unit version 1.02 or lower is 1,000 pps.

\*10. An IGMP client is mounted for the EtherNet/IP port. If an Ethernet switch that supports IGMP snooping is used, filtering of unnecessary multicast packets is performed.

\*11. The maximum number of TCP socket service of the CPU unit version 1.02 or lower is 16.

# Performance specifications for CPU units with robotic functionality

Item			NJ5 CPU Unit				
			NJ501-4500	NJ501-4400	NJ501-4300	NJ501-4310 <sup>*1</sup>	
Motion control	Robotics	Delta robot	3 + 1 (optional rotational axis) axes per robot				
		Number of Delta robots 8 Delta robots max. (depending on the number of axes supported by the			the CPU)		
	1						

<sup>\*1.</sup> The NJ501-4310 CPU unit only supports one Delta robot.

Note: For robot control by NJ501-4\_0, use the Accurax G5 servo drive with built-in EtherCAT communications, absolute encoder and brake.

# Performance specifications for CPU units with database connection

Item			NJ5 CPU Unit			
			NJ501-1520	NJ501-1420	NJ501-1320	
Programming	Memory for CJ-series units (can be specified with AT specifications for variables)		32,768 words × 25 banks <sup>-1</sup> (E0_00000 to E18_32767)			

 $^{*1.}$  When the spool function is enabled, the DB connection service uses E9\_0 to E18\_32767.

# **Function specifications**

# **Common function specifications**

Item				NJ CPU Unit
Tasks	Function	Function		I/O refreshing and the user program are executed in units that are called tasks.
-				Tasks are used to specify execution conditions and execution priority.
		Periodically executed tasks		Maximum number of primary periodic tasks: 1 Maximum number of periodic tasks: 3
		Conditionally e	xecuted tasks <sup>*1</sup>	Maximum number of even tasks: 32
		· · · · · · · · · · · · · · · · · · ·		When active even task instruction is executed or when condition expression for variable is met
	Setup	System service monitoring		The execution interval and the percentage of the total user program execution time are moni-
		settings		tored for the system services (processes that are executed by the CPU Unit separate from task
Programming	POUs	Programs		execution). POUs that are assigned to tasks.
riogramming	(program	Function block	e	POUs that are used to create objects with specific conditions.
	organization	Functions		POUs that are used to create an object that determine unique outputs for the inputs, such as
	units)			for data processing.
	Programming	Types		Ladder diagrams <sup>2</sup> and structured text (ST).
	languages			
	Namespaces*3	Fatament as a second		A concept that is used to group identifiers for POU definitions.
	Variables	External access of variables		Network variables (the function which allows access from the HMI, host computers or other controllers)
	Data types	Basic data type	s	BOOL, BYTE, WORD, DWORD, LWORD, INT, SINT, DINT, LINT, UINT, USINT, UDINT,
	21			ULINT, REAL, LREAL, TIME (durations), DATE, TIME_OF_DAY, DATE_AND_TIME and
				STRING (text strings)
		Derivative data		Structures, unions, enumerations
		Structures	Function	A derivative data type that groups together data with different variable types. Number of members: 2,048 max.
				Nesting levels: 8 max.
			Member data types	Basic data types, structures, unions, enumerations, array variables
			Specifying member offsets	You can use member offsets to place structure members at any memory locations."3
		Unions	Function	A derivative data type that groups together data with different variable types. Number of members: 4 max.
			Member data types	BOOL, BYTE, WORD, DWORD and LWORD.
		Enumerations	Function	A derivative data type that uses text strings called enumerators to express variable values.
	Data type attributes	Array specifications	Function	An array is a group of elements with the same data type. You specify the number (subscript) of the element from the first element to specify the element. Number of dimensions: 3 max.
				Number of elements: 65,535 max.
			Array	Supported.
			specifications	
		Dango anosifia	for FB instances	Vou can specify a range for a data type in advance. The data type can take only values that
		Range specific	auons	You can specify a range for a data type in advance. The data type can take only values that are in the specified range.
		Libraries		User libraries.
Motion	Control modes			Position control, velocity control, torque control
control <sup>*4</sup>	Axis types			Servo axes, virtual servo axes, encoder axes and virtual encoder axes
		an be managed		Command positions and actual positions
	Single-axis	Single-axis position	Absolute positioning	Positioning is performed for a target position that is specified with an absolute value.
		contol	Relative positioning	Positioning is performed for a specified travel distance from the command current position.
			Interrupt feeding	Positioning is performed for a specified travel distance from the position where an interrupt input was received from an external input.
			Cyclic synchro- nous absolute positioning <sup>*1</sup>	The function which output command positions in every control period in the position control mode.

Item				NJ CPU Unit
Motion con-	Single-axis	Single-axis	Velocity control	Velocity control is performed in position control mode.
trol <sup>*9</sup>		velocity control	Cyclic synchronous velocity control	A velocity command is output each control period in the velocity control mode.
		Single-axis torque control	Torque control	The torque of the motor is controlled.
		Single-axis synchronized	Starting cam operation	A cam motion is performed using the specified cam table.
		control	Ending cam operation	The cam motion for the axis that is specified with the input parameter is ended.
			Starting gear operation	A gear motion with the specified gear ratio is performed between a master axis and slave axis
			Positioning gear operation	A gear motion with the specified gear ratio and sync position is performed between a master axis and slave axis.
			Ending gear operation	The specified gear motion or positioning gear motion is ended.
			Synchronous positioning	Positioning is performed in sync with a specified master axis.
			Master axis phase shift	The phase of a master axis in synchronized control is shifted.
			Combining axes	The command positions of two axes are added or subtracted and the result is output as the command position.
		Single-axis manual	Powering the servo	The servo in the servo drive is turned ON to enable axis motion.
		operation	Jogging	An axis is jogged at a specified target velocity.
	Auxiliary functions for	Resetting axis errors	Axes errors are cleared.	
	single-axis control	Homing	A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.	
			Homing with parameter <sup>*1</sup>	Specifying the parameter, a motor is operated and the limit signals, home proximity signal and home signal are used to define home.
			High-speed homing	Positioning is performed for an absolute target position of 0 to return to home.
			Stopping	An axis is decelerated to a stop at the specified rate.
			Immediately stopping	An axis is stopped immediately.
			Override factors	The target velocity of an axis can be changed.
			Changing the current position	The command current position or actual current position of an axis can be changed to any position.
			Enabling external latches	The position of an axis is recorded when a trigger occurs.
			Disabling external latches	The current latch is disabled.
			Zone monitoring	You can monitor the command position or actual position of an axis to see when it is within a specified range (zone).
			Enabling digital cam switches <sup>*5</sup>	You can turn a digital output ON and OFF according to the position of an axis.
			Monitoring axis following error	You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.
			Resetting the following error	The error between the command current position and actual current position is set to 0.
			Torque limit	The torque control function of the servo drive can be enabled or disabled and the torque limits can be set to control the output torque.
			Position compensation	The function which compensate the position for the axis in operation.
			Start velocity <sup>*6</sup>	You can set the initial velocity when axis motion starts.
	Axes groups	Multi-axes coordinated	Absolute linear interpolation	Linear interpolation is performed to a specified absolute position.
		control	Relative linear interpolation	Linear interpolation is performed to a specified relative position.
			Circular 2D interpolation	Circular interpolation is performed for two axes.
		Axes group cy- clic synchro- nous absolute positioning	A positioning command is output each control period in Position control mode. <sup>*3</sup>	

Item				
Motion	Axes groups	Auxiliary	Resetting axes	Axes group errors and axis errors are cleared.
control <sup>*9</sup>	2 aka	functions for multi-axes	group errors Enabling axes	Motion of an axes group is enabled.
		coordinated control	groups Disabling axes	Motion of an axes group is disabled.
			groups	
			Stopping axes groups	All axes in interpolated motion are decelerated to a stop.
			Immediately	All axes in interpolated motion are stopped immediately.
			stopping axes groups	
			Setting axes group override factors	The blended target velocity is changed during interpolated motion.
			Reading axes group positions	The command current positions and actual current positions of an axes group can be read."3
			Changing the axes in a group	The composition axes parameter in the axes group parameters can be overwritten temporari- ly. <sup>3</sup>
	Common items	Cams	Setting cam table properties	The end point index of the cam table that is specified in the input parameter is changed.
			Saving cam tables	The cam table that is specified with the input parameter is saved in non-volatile memory in the CPU unit.
			Generating cam tables <sup>*7</sup>	The cam table that is specified with the input parameter is generated from the cam property and cam mode.
		Parameters	Writing MC settings	Some of the axis parameters or axes group parameters are overwritten temporarily.
			Changing axis parameters*7	You can access and change the axis parameters from the user program.
	Auxiliary	Count modes		You can select either linear mode (finite length) or rotary mode (infinite length).
	functions	Unit conversion	ns Automatic	You can set the display unit for each axis according to the machine. Jerk is set for the acceleration/deceleration curve for an axis motion or axes group motion.
		Acceleration/ deceleration control	acceleration/ deceleration control	Jerk is set for the acceleration/deceleration curve for an axis motion of axes group motion.
			Changing the acceleration and deceleration rates	You can change the acceleration or deceleration rate even during acceleration or deceleration
		In-position che		You can set an in-position range and in-position check time to confirm when positioning is completed.
		Stop method		You can set the stop method to the immediate stop input signal or limit input signal.
		Re-execution o instructions	f motion control	You can change the input variables for a motion control instruction during execution and execute the instruction again to change the target values during operation.
		Multi-execution of motion con-		You can specify when to start execution and how to connect the velocities between operations
		trol instruction Continuous axe (transition mod	es group motions	when another motion control instruction is executed during operation. You can specify the transition mode for multi-execution of instructions for axes group operation
		Monitoring	Software limits	Software limits are set for each axis.
		functions	Following error	The error between the command current value and the actual current value is monitored for ar axis.
			Velocity, accel- eration/decelera-	You can set warning values for each axis and each axes group.
			tion rate, torque, interpolation velocity and interpolation acceleration/de- celeration rate	
		Absolute encod	ler support	You can use an OMRON Accurax-G5 series servomotor with an absolute encoder to eliminate the need to perform homing at startup. You can inverse the logic of immediate stop input signal, positive limit input signal, negative
	Fatam dist. (	Input signal log	ne inversion *	limit input signal or home proximity input signal.
	External interfac	ce signals		The servo drive input signals listed on below are used. Home signal, home proximity signal, positive limit signal, negative limit signal, immediate stop signal and interrupt input signal.
Unit (I/O)	NX units <sup>*6</sup>			You can use NX units through the communication coupler unit.
management	CJ-series units	Maximum num		40
		Basic I/O units	Chattering and noise counter- measures	Input response times are set.
			Load short-cir- cuit protection and I/O discon- nection detec- tion	Alarm information for basic I/O units is read.
	EtherCAT slaves	Number of slav		NJ5/NJ3: 192 max. NJ1: 64 max.
	SIGVES	Basic I/O	Chattering and noise counter- measures	IND 1: 64 max. Input response times are set.

Communica- tions				
	Peripheral USB	port		A port for communications with various kinds of support software running on a personal com
		1-		puter.
	EtherNet/IP	Communication	n protocol	TCP/IP, UDP/IP
	port	CIP communi-	Tag data links	Programless cyclic data exchange is performed with the devices on the EtherNet/IP network
		cations service		CIP commands are sent to or received from the devices on the EtherNet/IP network.
			communications	
		TCP/IP appli- cations	Socket services	Data is sent to and received from any node on EtherNet using the UDP or TCP protocol. Socket communications instructions are used.
			FTP client*7	File can be read from or written to computers to other Ethernet nodes from the CPU unit. FTF client communications instructions are used.
			FTP server	Files can be read from or written to the SD memory card in the CPU unit from computers at other Ethernet nodes.
			Automatic clock adjustment	Clock information is read from the NTP server at the specified time or at specified interval afte the power supply to the CPU unit is turned ON. The internal clock time in the CPU unit is updated with the read time.
			SNMP agent	Built-in EtherNet/IP port internal status information is provided to network management software that uses an SNMP manager.
	EtherCAT port	Supported services	Process data communications	,
			SDO communications	,
		Network scanni	0	Information is read from connected slave devices and the slave configuration is automatically generated.
		DC (distributed	•	Time is synchronized by sharing the EtherCAT system time between all EtherCAT devices (including the master).
		Packet monitor	-	The frames that are sent by the master and the frames that are received by the master can be saved. The data that is saved can be viewed with WireShark or other applications.
		Enable/disable slaves	settings for	The slaves can be enabled or disabled as communications targets.
		Disconnecting/ slaves	connecting	Temporarily disconnects a slave from the EtherCAT network for maintenance, such as for re placement of the slave and then connects the slave again.
		Supported application protocol	CoE	SDO messages of the CAN application can be sent to slaves via EtherCAT.
	Communication	•		The following instructions are supported:
				CIP communications instructions, socket communications instructions, SDO message instructions, no-protocol communications instructions, protocol macro instructions and FTP client in structions <sup>77</sup> .
Operation management	RUN output con	itacts		The output on the NJ-P□3001 power supply unit turns ON in RUN mode.
System management	Event logs	Categories		Events are recorded in the following logs: <ul> <li>System event log</li> <li>Access event log</li> </ul>
		Number of ever	nts per event log	User-defined event log NJ5: 1,024 max.
Debugging	Online editing			NJ3/NJ1: 512 max. Programs, function blocks, functions and global variables can be changed online. Different op
				erators can change different POUs across a network.
	Forced	Forced refreshi	ng	The user can force specific variables to TRUE or FALSE.
	refreshing			
		Number of forced vari-	For EtherCAT slaves	64 max.
				64 max.
		forced vari-	slaves For CJ-series	64 max.
	MC test Run Synchronizatior	forced vari- ables	slaves For CJ-series	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when
	MC test Run Synchronization	forced vari- ables n Differentiation i	slaves For CJ-series units nonitoring <sup>*1</sup>	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored.
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation i Number of cont	slaves For CJ-series units monitoring <sup>*1</sup> acts <sup>*1</sup>	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max.
	MC test Run Synchronization	forced vari- ables n Differentiation i	slaves For CJ-series units nonitoring <sup>*1</sup>	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored.
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation i Number of cont	slaves For CJ-series units monitoring <sup>*1</sup> tacts <sup>*1</sup> Single triggered	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same wher online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation i Number of cont	slaves For CJ-series units monitoring <sup>*1</sup> acts <sup>*1</sup> Single triggered trace Continuous trace	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically.
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation i Number of cont Types	slaves For CJ-series units monitoring <sup>*1</sup> acts <sup>*1</sup> Single triggered trace Continuous trace	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation i Number of cont Types Number of simu	slaves For CJ-series units monitoring <sup>*1</sup> cacts <sup>*1</sup> Single triggered trace Continuous trace ultaneous data	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>*8</sup> .
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation i Number of cont Types Number of simu trace Number of reco	slaves For CJ-series units monitoring <sup>*1</sup> acts <sup>*1</sup> Single triggered trace Continuous trace ultaneous data rds	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>*8</sup> . NJ3/NJ1: 2 max. 10,000 max.
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation i Number of cont Types Number of simu trace	slaves For CJ-series units monitoring <sup>*1</sup> cacts <sup>*1</sup> Single triggered trace Continuous trace ultaneous data	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>*8</sup> . NJ3/NJ1: 2 max.
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation i Number of cont Types Number of simu trace Number of reco	slaves For CJ-series units monitoring <sup>*1</sup> facts <sup>*1</sup> Single triggered trace Continuous trace Jltaneous data rds Number of sam- pled variables	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>*8</sup> . NJ3/NJ1: 2 max. 10,000 max. NJ5: 192 variables max. NJ3/NJ1: 48 variables max. Sampling is performed for the specified task period, at the specified time or when a sampling
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation i Number of cont Types Number of simu trace Number of reco Sampling Timing of samp	slaves For CJ-series units nonitoring <sup>*1</sup> acts <sup>*1</sup> Single triggered trace Continuous trace Jltaneous data rds Number of sam- pled variables ling	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>*8</sup> . NJ3/NJ1: 2 max. 10,000 max. NJ5: 192 variables max. NJ3/NJ1: 48 variables max. Sampling is performed for the specified task period, at the specified time or when a sampling instruction is executed.
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation i Number of cont Types Number of simu trace Number of reco Sampling	slaves For CJ-series units monitoring <sup>*1</sup> facts <sup>*1</sup> Single triggered trace Continuous trace Jltaneous data rds Number of sam- pled variables	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>78</sup> . NJ3/NJ1: 2 max. 10,000 max. NJ5: 192 variables max. NJ3/NJ1: 48 variables max. Sampling is performed for the specified task period, at the specified time or when a sampling instruction is executed. Trigger conditions are set to record data before and after an event. When BOOL variable changes to TRUE or FALSE. Comparison of non-BOOL variable with a constant.
	MC test Run Synchronizatior Differentiation monitoring <sup>*1</sup>	forced vari- ables n Differentiation I Number of cont Types Number of simu trace Number of reco Sampling Timing of samp Triggered	slaves For CJ-series units monitoring <sup>*1</sup> facts <sup>*1</sup> Single triggered trace Continuous trace Ultaneous data rds Number of sam- pled variables ling Triggered traces Trigger condi- tions	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>78</sup> . NJ3/NJ1: 2 max. 10,000 max. NJ5: 192 variables max. NJ3/NJ1: 48 variables max. Sampling is performed for the specified task period, at the specified time or when a sampling instruction is executed. Trigger conditions are set to record data before and after an event. When BOOL variable changes to TRUE or FALSE. Comparison of non-BOOL variable with a constant. Comparison method: Equals (=), greater than (>), greater than or equals (≥), less than (<), less than or equals (≤), not equal (≠).
	MC test Run Synchronization Differentiation monitoring <sup>11</sup> Data tracing	forced vari- ables n Differentiation i Number of cont Types Number of simu trace Number of reco Sampling Timing of samp Triggered	slaves For CJ-series units nonitoring <sup>'1</sup> acts <sup>'1</sup> Single triggered trace Continuous trace Ultaneous data rds Number of sam- pled variables ling Triggered traces Trigger condi-	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>*8</sup> . NJ3/NJ1: 2 max. 10,000 max. NJ5: 192 variables max. NJ3/NJ1: 48 variables max. Sampling is performed for the specified task period, at the specified time or when a sampling instruction is executed. Trigger conditions are set to record data before and after an event. When BOOL variable changes to TRUE or FALSE. Comparison of non-BOOL variable with a constant. Comparison method: Equals (=), greater than (>), greater than or equals (≥), less than (<), less than or equals (≤), not equal (≠). Trigger position setting: A slider is used to set the percentage of sampling before and after the trigger condition is met.
	MC test Run Synchronization Differentiation monitoring <sup>11</sup> Data tracing Simulation	forced vari- ables n Differentiation I Number of cont Types Number of simu trace Number of reco Sampling Timing of samp Triggered traces	slaves For CJ-series units nonitoring <sup>*1</sup> acts <sup>*1</sup> Single triggered trace Continuous trace Utaneous data rds Number of sam- pled variables ling Triggered traces Trigger condi- tions Delay	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>*8</sup> . NJ3/NJ1: 2 max. 10,000 max. NJ5: 192 variables max. Sampling is performed for the specified task period, at the specified time or when a sampling instruction is executed. Trigger conditions are set to record data before and after an event. When BOOL variable changes to TRUE or FALSE. Comparison of non-BOOL variable with a constant. Comparison method: Equals (=), greater than (>), greater than or equals (≥), less than (<), less than or equals (≤), not equal (≠). Trigger condition is met. The operation of the CPU unit is emulated in the Sysmac Studio.
Reliability	MC test Run Synchronization Differentiation monitoring <sup>11</sup> Data tracing	forced vari- ables Differentiation i Number of cont Types Number of simu trace Number of reco Sampling Timing of samp Triggered traces Controller error	slaves For CJ-series units monitoring <sup>*1</sup> facts <sup>*1</sup> Single triggered trace Continuous trace Jitaneous data rds Number of sam- pled variables ling Triggered traces Trigger condi- tions Delay	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>78</sup> . NJ3/NJ1: 2 max. 10,000 max. NJ5: 192 variables max. Sampling is performed for the specified task period, at the specified time or when a sampling instruction is executed. Trigger conditions are set to record data before and after an event. When BOOL variable changes to TRUE or FALSE. Comparison of non-BOOL variable with a constant. Comparison of non-BOOL variable with a constant. Comparison of non-BOOL variable with a constant. Comparison method: Equals (=), greater than or equals (≥), less than (<), less than or equals (≤), not equal (≠). Trigger condition is met. The operation of the CPU unit is emulated in the Sysmac Studio. Major fault, partial fault, minor fault, observation and information.
Reliability	MC test Run Synchronization Differentiation monitoring <sup>11</sup> Data tracing Simulation	forced vari- ables n Differentiation I Number of cont Types Number of simu trace Number of reco Sampling Timing of samp Triggered traces	slaves For CJ-series units nonitoring <sup>*1</sup> acts <sup>*1</sup> Single triggered trace Continuous trace Utaneous data rds Number of sam- pled variables ling Triggered traces Trigger condi- tions Delay	64 max. Motor operation and wiring can be checked from the Sysmac Studio. The project file in the Sysmac Studio and the data in the CPU unit can be made the same when online. Rising/falling edge of contacts can be monitored. 8 max. When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically. Data tracing is executed continuously and the trace data is collected by the Sysmac Studio. NJ5: 4 max <sup>*8</sup> . NJ3/NJ1: 2 max. 10,000 max. NJ5: 192 variables max. Sampling is performed for the specified task period, at the specified time or when a sampling instruction is executed. Trigger conditions are set to record data before and after an event. When BOOL variable changes to TRUE or FALSE. Comparison of non-BOOL variable with a constant. Comparison method: Equals (=), greater than (>), greater than or equals (≥), less than (<), less than or equals (≤), not equal (≠). Trigger condition is met. The operation of the CPU unit is emulated in the Sysmac Studio.

ltem				NJ CPU Unit
Security	Protecting software assets		s and serial IDs	When going online to a CPU Unit from the Sysmac Studio, the CPU Unit name in the project is compared to the name of the CPU Unit being connected to.
and preventing operating mistakes	Protection	User program transfer with no restoration infor- mation	You can prevent reading data in the CPU unit from the Sysmac Studio.	
			CPU unit write protection	You can prevent writing data to the CPU unit from the Sysmac Studio or SD memory card.
			Overall project file protection	You can use passwords to protect .smc files from unauthorized opening on the Sysmac Studio
			Data protection	You can use passwords to protect POUs on the Sysmac Studio. <sup>*3</sup>
		Verification of operation authority	Verification of operation authority	Online operations can be restricted by operation rights to prevent damage to equipment or in- juries that may be caused by operating mistakes.
			Number of groups	5'9
		Verification of cution ID	user program exe-	Sysmac Studio for the specific hardware (CPU unit).
SD memory	Storage type			SD memory card, SDHC memory card
card	Application	Automatic transfer from SD memory card <sup>*1</sup>		The data in the autoload folder on an SD memory card is automatically loaded when the power supply to the controller is turned ON.
		SD memory car instructions	rd operation	You can access SD memory cards from instructions in the user program.
		File operations Studio	from the Sysmac	You can perform file operations for Controller files in the SD memory card and read/write standard document files on the computer.
				Notification of the expiration of the life of the SD memory card is provided in a system-defined variable and event log.
Backup <sup>*1</sup>	SD memory card backup	Operation	Using front switch	You can use front switch to backup, compare or restore data.
	functions		Using system- defined variable	You can use system-defined variables to backup or compare data.
			Memory card op- erations dialog box	alog box on the Sysmac Studio.
			Using instruction <sup>*7</sup>	Backup operation can be performed by using instruction.
				Prohibit SD memory card backup functions.
	Sysmac Studio	controller backu	p functions	Backup, restore and verification operations for units can be performed from the Sysmac Studio

\*1.

Supported only by the CPU units with unit version 1.03 or higher. Inline ST is supported (Inline ST is ST that is written as an element in a ladder diagram). \*2.

\*3. Supported only by the CPU units with unit version 1.01 or higher.

\*4. The NJ101-9000 CPU unit doesn't support motion control.

- \*5. Supported only by the CPU units with unit version 1.06 or higher.
- \*6. Supported only by the CPU units with unit version 1.05 or higher.
- \*7. Supported only by the CPU units with unit version 1.08 or higher.
- \*8. Maximum number of simultaneous data trace of the NJ501-1 20 CPU unit version 1.08 or higher is 2.
- \*9. When the NJ501 CPU units with unit version 1.00 is used, this value becomes two.

# Function specifications for CPU units with robotic functionality

Item				NJ501-4 0 CPU Unit
Robot control functions	Axes group	Multi-axes coordinated	Robot parameter settings	Sets the parameters (such as kinematics type and link length) for the robot.
		control	Time-specified absolute positioning command	Moves the robot to a specified position in a specified time.
			Synchronization with conveyor	Makes the active TCP follow a workpiece on the conveyor performing the conveyor tracking function.
			Robot jog	Jogs a robot defined by an axes group according the selected target velocity, coor- dinate system and TCP.
			Transition mode and buffering	Select the method to use between robot instructions to perform smooth trajectories.
	Auxiliary functions	Multi-axes coordinated	User coordinate system	Two types of coordinate systems, Machine Coordinate System (MCS) and User Coordinate System (UCS) can be used for robots.
		control	Robot tool	Defines multiple TCP's (Tool Center Point) for the robots.
			Inverse kinematics	Transforms the coordinate values (X, Y, Z) of the robot's TCP to the coordinate values of each axis.
		Monitoring	Monitor	Reads the current position and current velocity of the robot.
		functions	Workspace check	Checks if the robot is moving within the definable working volume.

### Function specifications for CPU units with database connection

Item		NJ501-1 20 CPU Unit
Supported po	rt	Built-in EtherNet/IP port
Supported DE		Microsoft Corporation: SQL Server 2008/2008 R2/2012 Oracle Corporation: Oracle Database 10g/11g International Business Machines Corporation: DB2 for Linux, UNIX and Windows 9.5/9.7/10.1/10.5 Oracle Corporation: MySQL Community Edition 5.1/5.5/5.6 <sup>+1</sup> Firebird Foundation Incorporated: Firebird 2.1/2.5
Number of DE	connections (number of databases	3 connections max. <sup>2</sup>
that can be co	onnected at the same time)	
Instruction	Supported operations	The following operations can be performed by executing DB connection instructions in the NJ series CPU units. Inserting records (INSERT), updating records (UPDATE), retrieving records (SELECT) and deleting records (DELETE)
	Number of columns in an INSERT/ UPDATE/SELECT operations	SQL server: 1,024 columns max. Oracle/DB2/MySQL/Firebird: 1,000 columns max.
	Number of records in the output of a SELECT operation	65,535 elements max. 4 MB max.
	Number of DB Map Variables for	SQL server: 60 variables max.
	which a mapping can be created	Oracle/DB2/MySQL: 30 variables max. Firebird: 15 variables max. Even if the number of DB Map Variables has not reached the upper limit, the total number of members of struc- tures used as data type of DB Map Variables is 10,000 members max.
Run mode of	the DB connection service	<ul> <li>Operation mode or Test mode:</li> <li>Operation mode: When each instruction is executed, the service actually accesses the DB.</li> <li>Test mode: When each instruction is executed, the service ends the instruction normally without accessing the DB actually.</li> </ul>
Spool functio	n	Used to store the SQL statements when an error occurred and resend the statements when the communications are recovered from the error. Spool capacity: 1 MB <sup>'3</sup>
Operation log function		<ul> <li>The following three types of logs can be recorded:</li> <li>Execution log: Log for tracing the executions of the DB connection service.</li> <li>Debug log: Detailed log for SQL statement executions of the DB connection service.</li> <li>SQL execution failure log: Log for execution failures of SQL statements in the DB.</li> </ul>
DB connectio	n service shutdown function	Used to shut down the DB connection service after automatically saving the operation log files into the SD mem- ory card.

 $^{\ast 1.}$  The supported storage engines of the DB are InnoDB and MyISAM.

\*2. When two or more DB connections are established, the operation cannot be guaranteed if you set different database types for the connections.

\*3. Refer to "NJ-Series database connection CPU units user's manual (W527)" for more information.

Note: DB2, MySQL and Firebird connections are supported only by the CPU units version 1.08 or higher and the Sysmac Studio version 1.09 or higher.

### Function specifications for CPU units with SECS/GEM communications


Item	NJ501-1340 CPU Unit
Supported port	Built-in EtherNet/IP port
Supported standard <sup>*1</sup>	The unit conforms to the following SEMI standards: E37-0303, E37.1-0702, E5-0707 and E30-0307
Fundamental GEM requirement	State model, equipment processing state, host-initiated S1, F13/F14 scenario, event notification, on-line identi- fication, error message, control (operator initiated), documentation
Additional GEM capability	Establish communications, dynamic event report configuration, variable data collection, trace data collection, status data collection, alarm management, remote control, equipment constant, process recipe management <sup>2</sup> , material movement, equipment terminal service, clock, limit monitoring, spooling, control (host initiated)
User defined message	You can create non-GEM compliant communication messages and have host communications
GEM specific instruction	The unit supports 29 instructions to perform the following: • Changing the GEM service status • Setting HSMS communications • Reporting events and alarms • Acknowledging host commands and enhanced remote commands • Changing equipment constants • Uploading and downloading process programs • Sending and acknowledging equipment terminal messages • Requesting to change time • Sending user-defined messages • Getting SECS communications log
GEM service log	Can record the following information: • HSMS communication log: Keeps log of HSMS communication operations • SECS message log: Keeps log of SECS-II communication messages • Execution log: Keeps log of executions of GEM instructions <sup>*2</sup>
Shutting down the GEM service	Saves the spool data and GEM service log records into an SD memory card and ends the GEM service

\*1. E42 recipes, large process programs and E139 recipes are not supported.


\*2. The capability is not available when no SD memory card is mounted.

# Nomenclature


# NJ CPU unit

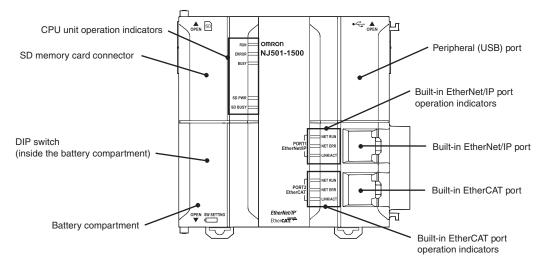

# 100 to 240 VAC power supply unit (NJ-PA3001)

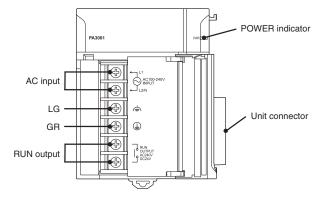


# 24 VDC power supply unit (NJ-PD3001)

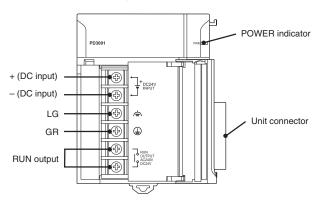


# Dimensions


# NJ-Series system (NJ-P 3001 + NJ 01- + one I/O unit + CJ1W-TER01)

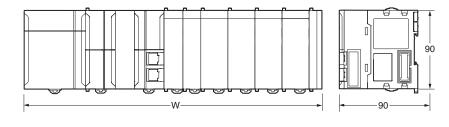

No. of units mounted	Rack width (mm)
with 31-mm width	With NJ CPU
1	205.7
2	236.7
3	267.7
4	298.7
5	329.7
6	360.7
7	391.7
8	422.7
9	453.7
10	484.7


# Power supply unit (NJ-PA3001/PD3001)

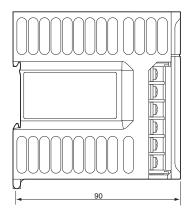


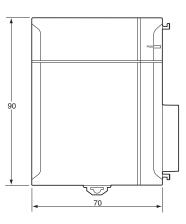


# End cover (CJ1W-TER01)

NJ CPU unit

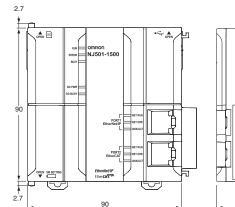

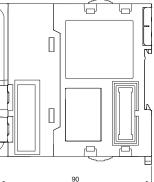

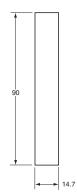


# CJ units


Fujitsu connector

MIL connector

M3 screw and screwless type connector

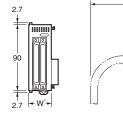



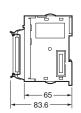



\* Refer to the CJ unit tables in the ordering information section for the specific unit width.

I/O connector


(140)

68

65

69.3

# Mounting dimensions

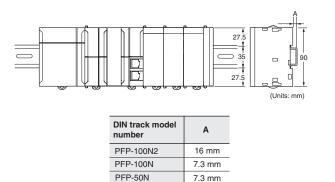

Consider the following points when expanding the configuration: - The total length of I/O connecting cable must not be exceed 12 m. - I/O Connecting cables require the bending radius indicates below. Note: 1.

2. Outer diameter of expansion cable: 8.6 mm.

# Power supply units current consumption

#### Checking current and power consumption

After selecting a power supply unit based on considerations such as the power supply voltage, calculate the current and power requirements for each rack

Mounting height

Approx. 100 to 150 mm

6

90 mm

#### Condition 1: Current requirements

There are two voltage groups for internal power consumption: 5 V and 24 V.

Current consumption at 5 V (internal logic power supply) Current consumption at 24 V (relay driving power supply)

#### Condition 2: Power requirements

For each rack, the upper limits are determined for the current and power that can be provided to the mounted units. Design the system so that the total current consumption for all the mounted units does not exceed the maximum total power or the maximum current supplied for the voltage groups shown in the following tables.

The maximum current and total power supplied for CPU racks and expansion racks according to the power supply unit model are shown below.

	Max. current su			(C) Max.
supply units		(A) 5 VDC expansion rack	(B) 24 VDC	total power supplied
NJ-PA3001	6.0 A	6.0 A	1.0 A	30 W
NJ-PD3001	6.0 A	6.0 A	1.0 A	30 W

Conditions 1 and 2 are below must be satisfied. Condition 1: Maximum current (1) Total unit current consumption at 5 V  $\leq$  (A) value

(2) Total unit current consumption at 24 V ≤ (B) value

Condition 2: Maximum power  $(1) \times 5 V + (2) \times 24 V \leq (C)$  value

\*1. Including supply to the CPU unit.

Note: 1. For CPU racks, include the CPU unit current and power consumption in the calculations. When expanding, also include the current and power consumption of the I/O control unit in the calculations.

2. For expansion racks, include the I/O interface unit current and power consumption in the calculations.


### Example: Calculating total current and power consumption

When the following units are mounted to a NJ series CPU rack using a NJ-PA3001 power supply unit.

Unit type	Model	Quantity	Voltage group	
			5 V	24 V
CPU unit	NJ501-1500	1	1.90 A	-
I/O control unit	CJ1W-IC101	1	0.02 A	-
Basic I/O units (input units)	CJ1W-ID211	2	0.08 A	-
	CJ1W-ID231	2	0.09 A	-
Basic I/O units (output units)	CJ1W-OC201	2	0.09 A	0.048 A
Special I/O unit	CJ1W-DA041	1	0.12 A	-
CPU bus unit	CJ1W-SCU22	1	0.29 A	-
Current consumption	Total		1.90 A + 0.02 A + 0.08 A × 2 + 0.09 A × 2 + 0.09 A × 2 + 0.12 A + 0.29 A	0.048 A × 2
	Result		2.85 A (≤ 6.0 A)	0.096 A (≤ 1.0 A)
Power consumption	Total		2.85 A × 5 V = 14.25 W	0.096 A × 24 V = 2.3 W
	Result		14.25 W + 2.3 W = 16.55 W (≤ 3	0 W)


Note: For details on unit current consumption, refer to ordering information.

# **Expansion cable**

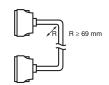


# Ordering information

### NJ series system

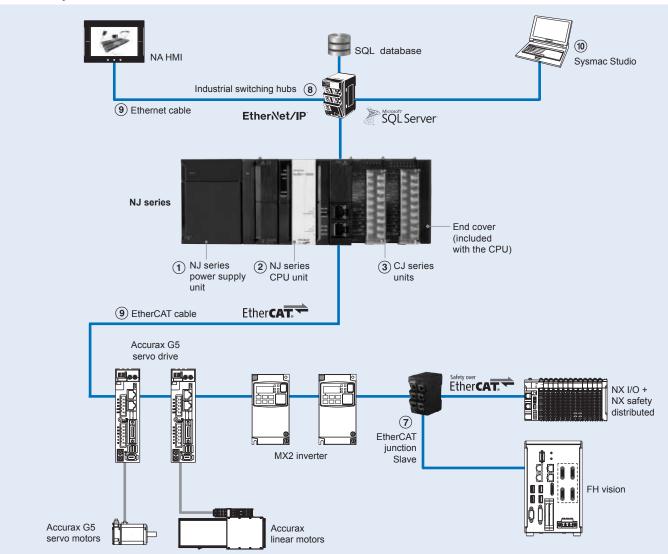

#### NJ series expansion racks

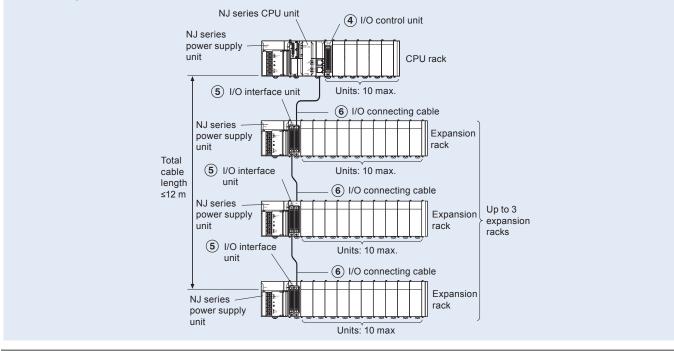

### Power supply units

Symbol	Name	Output capacity			RUN output	Model
		5 VDC	24 VDC	Total		
1	100 to 240 VAC power supply unit for NJ CPU	6.0 A	1.0 A	30 W	Supported	NJ-PA3001
	24 VDC power supply unit for NJ CPU					NJ-PD3001

Note: Power supply units for the CJ Series cannot be used as a power supply for a CPU rack of the NJ System or as a power supply for an expansion rack.

### NJ series CPU units

Symbol	CPU	Program	Variables capacity	Specifications	Functiona	ities				Number	Model
		capacity			Sequence	Motion	DB con- nection	Robotics	SECS/ GEM	of axes	
2)	NJ501	20 MB	2 MB: Retained	I/O capacity: 2,560 points	•	•				16	NJ501-4320
			4 MB: Not retained		•	•	•			64	NJ501-1520
				CPU rack: 10 units max.	•	•				32	NJ501-1420
				Expansion rack: 10 units max. (Up to 3 expansion racks)	•	•				16	NJ501-1320
						•		•		64	NJ501-4500
					•	•				32	NJ501-4400
						•		•		16	NJ501-4300
			40 units max. per system		•		•		16	NJ501-4310	
				(CPU rack + 3 expansion racks)	•	•				16	NJ501-1340
				lacks	•	•				64	NJ501-1500
				Current consumption:	•	•				32	NJ501-1400
				1.90 A at 5 VDC		•				16	NJ501-1300
	NJ301	5 MB	0.5 MB: Retained		•	•				8	NJ301-1200
			2 MB: Not retained		•	•				4	NJ301-1100
	NJ101	3 MB			•	•				2	NJ101-1000
		1								0	NJ101-9000

<sup>\*1.</sup> The NJ501-4310 CPU unit only supports one Delta robot.

Note: The end cover unit CJ1W-TER01 is included with the CPU unit.

# CJ series digital I/O units

ymbol	Points	Туре		Rated current	Width	Remarks	(A)	mption	Connection type	Model
							5 VDC	24 VDC		
	8	AC input	240 VAC	10 mA	31 mm	-	0.08	-	M3	CJ1W-IA201
	16		120 VAC	7 mA	31 mm	-	0.09	-	M3	CJ1W-IA111
	8	DC input	24 VDC	10 mA	31 mm	-	0.08	-	M3	CJ1W-ID201
	16		24 VDC	7 mA	31 mm	-	0.08	-	M3	CJ1W-ID211
					31 mm				Screwless	CJ1W-ID211(SL
	16		24 VDC	7 mA	31 mm	Fast-response (15 µs is ON, 90 µs is OFF)	0.13	-	M3	CJ1W-ID212
	16		24 VDC	7 mA	31 mm	Inputs start interrupt tasks in PLC program	0.08	-	M3	CJ1W-INT01
	16		24 VDC	7 mA	31 mm	Latches pulses down to 50 µs pulse width	0.08	-	M3	CJ1W-IDP01
	32		24 VDC	4.1 mA	20 mm	-	0.09	-	Fujitsu	CJ1W-ID231
	32		24 VDC	4.1 mA	20 mm	-	0.09	-	MIL	CJ1W-ID232
	32		24 VDC	4.1 mA	20 mm	Fast-response (15 µs is ON, 90 µs is OFF)	0.20	-	MIL	CJ1W-ID233
	64		24 VDC	4.1 mA	31 mm	-	0.09	-	Fujitsu	CJ1W-ID261
	64		24 VDC	4.1 mA	31 mm	-	0.09	-	MIL	CJ1W-ID262
	8	Triac output	250 VAC	0.6 mA	31 mm	-	0.22	-	M3	CJ1W-OA201
	8	Relay contact	250 VAC	2 A	31 mm	-	0.09	0.048	M3	CJ1W-OC201
		output			31 mm				Screwless	CJ1W-OC201(S
	16		250 VAC	2 A	31 mm	-	0.11	0.096	M3	CJ1W-OC211
					31 mm				Screwless	CJ1W-OC211(S
	8	DC output (sink)	12 to 24 VDC	2 A	31 mm	-	0.09	-	M3	CJ1W-OD201
	8		12 to 24 VDC	0.5 A	31 mm	-	0.10	-	M3	CJ1W-OD203
	16		12 to 24 VDC	0.5 A	31 mm	-	0.10	-	M3	CJ1W-OD211
					31 mm				Screwless	CJ1W-OD211(S
	16		24 VDC	0.5 A	31 mm	Fast-response (15 µs is ON, 80 µs is OFF)	0.15	-	M3	CJ1W-OD213
	32		12 to 24 VDC	0.5 A	20 mm	-	0.14	-	Fujitsu	CJ1W-OD231
	32		12 to 24 VDC	0.5 A	20 mm	-	0.14	-	MIL	CJ1W-OD233
	32			0.5 A	20 mm	Fast-response (15 µs is ON, 80 µs is OFF)	0.22	-	MIL	CJ1W-OD234
	64		12 to 24 VDC	0.3 A	31 mm	-	0.17	-	Fujitsu	CJ1W-OD261
	64		12 to 24 VDC	0.3 A	31 mm	_	0.17	-	MIL	CJ1W-OD263
	8	DC output (source)	24 VDC	2 A	31 mm	Short-circuit protection	0.11	-	M3	CJ1W-OD202
	8			0.5 A	31 mm	Short-circuit protection	0.10	-	M3	CJ1W-OD204
	16		24 VDC	0.5 A	31 mm	Short-circuit protection	0.10	-	M3	CJ1W-OD212
					31 mm				Screwless	CJ1W-OD212(S
	32		24 VDC	0.3 A	20 mm	Short-circuit protection	0.15	-	MIL	CJ1W-OD232
	64			0.3 A	31 mm	-	0.17	-	MIL	CJ1W-OD262
	16 + 16	DC in + out (source)		0.5 A	31 mm	_	0.13	-	MIL	CJ1W-MD232
	16 + 16	DC in + out (sink)	-	0.5 A	31 mm	-	0.13	-	Fujitsu	CJ1W-MD231
	16 + 16			0.5 A	31 mm	_	0.13	-	MIL	CJ1W-MD233
	32 + 32			0.3 A	31 mm	_	0.14	-	Fujitsu	CJ1W-MD261
	32 + 32		24 VDC	0.3 A	31 mm	-	0.14	-	MIL	CJ1W-MD263
	32 + 32	DC in + out (TTL)	5 VDC	35 mA	31 mm	_	0.19	-	MIL	CJ1W-MD563

Note: MIL = Connector according to MIL-C-83503 (compatible with DIN 41651/IEC 60603-1).

# CJ series analogue I/O and control units

Points	Туре	Ranges	Resolution	Accura- cy <sup>*1</sup>	Conversion time	Width	Remarks	Curro (A)	ent	Connection type	Model
				-					24 V		
4	Universal analogue input	0 to 5 V, 1 to 5 V, 0 to 10 V, 0 to 20 mA, 4 to 20 mA, K, J, T, L, R, S, B, Pt100, Pt1000, JPt100	V/I: 1/ 12,000 T/C: 0.1°C RTD: 0.1°C	V: 0.3% I: 0.3% T/C: 0.3% RTD: 0.3%	250 ms/4 points	31 mm	Universal inputs, with zero/span adjustment, configurable alarms, scaling, sensor error detection	0.32	_	M3 Screwless	CJ1W-AD04U CJ1W-AD04U(SL)
4	Analogue input	0 to 5 V, 0 to 10 V, -10 to 10 V, 1 to 5 V, 4 to 20 mA	1/8,000	V: 0.2% I: 0.4%	250 μs/point	31 mm	Offset/gain adjustment, peak hold, moving average, alarms	0.42	-	M3 Screwless	CJ1W-AD041-V1 CJ1W-AD041-V1(S
4	High-speed analogue input	1 to 5 V, 0 to 10 V, -5 to 5 V, -10 to 10 V, 4 to 20 mA	1/40,000	V: 0.2% I: 0.4%	35 μs/4 points	31 mm	Direct conversion (CJ2H special instruction)	0.52	-	M3	CJ1W-AD042
8	Analogue input	1 to 5 V, 0 to 10 V, -10 to 10 V, 1 to 5 V, 4 to 20 mA	1/8,000	V: 0.2% I: 0.4%	250 μs/point	31 mm	Offset/gain adjustment, peak hold, moving average, alarms	0.42	-	M3 Screwless	CJ1W-AD081-V1 CJ1W-AD081-V1(S
2	Analogue output	0 to 5 V, 0 to 10 V, -10 to 10 V, 1 to 5 V, 4 to 20 mA	1/4,000	V: 0.3% I: 0.5%	1 ms/point	31 mm	Offset/gain adjustment, output hold	0.12	0.14	M3 Screwless	CJ1W-DA021 CJ1W-DA021(SL)
4	Analogue output	1 to 5 V, 0 to 10 V, -10 to 10 V, 1 to 5 V, 4 to 20 mA	1/4,000	V: 0.3% I: 0.5%	1 ms/point	31 mm	Offset/gain adjustment, output hold	0.12	0.2	M3 Screwless	CJ1W-DA041 CJ1W-DA041(SL)
4	High-speed analogue out- put	1 to 5 V, 0 to 10 V, -10 to 10 V	1/40,000	0.3%	35 μs/4 points	31 mm	Direct conversion (CJ2H special instruction)	0.40	-	М3	CJ1W-DA042V
8	Voltage output	1 to 5 V, 0 to 10 V, -10 to 10 V, 1 to 5 V	1/8,000	0.3%	250 μs/point	31 mm	Offset/gain adjustment, output hold	0.14	0.14	M3 Screwless	CJ1W-DA08V CJ1W-DA08V(SL)
8	Current output		1/8,000	0.5%	250 μs/point	31 mm	Offset/gain adjustment, output hold	0.14	0.17	M3 Screwless	CJ1W-DA08C CJ1W-DA08C(SL)
4 + 2	Analogue in + out	1 to 5 V, 0 to 10 V, -10 to 10 V, 1 to 5 V, 4 to 20 mA	1/8,000	in: 0.2% out: 0.3%	1 ms/point	31 mm	Offset/gain adjustment, scaling, peak hold, moving average, alarms, output hold	0.58	_	M3 Screwless	CJ1W-MAD42 CJ1W-MAD42(SL)
4	Universal analogue input	DC voltage, DC current, thermocouple, Pt100/Pt1000, potentiometer	1/256,000	0.05%	60 ms/4 points	31 mm	All inputs individually isolated, configurable alarms, maintenance functions, user-defined scaling, zero/span adjustment	0.30	-	M3	CJ1W-PH41U
2	Process input	4 to 20 mA, 0 to 20 mA, 0 to 10 V, -10 to 10 V, 0 to 5 V, -5 to 5 V, 1 to 5 V, 0 to 1.25 V, 1.25 to 1.25 V	1/64,000	0.05%	5 ms/point	31 mm	Configurable alarms, maintenance functions, user-defined scaling, zero/span adjustment, square root, totaliser	0.18	0.09	M3	CJ1W-PDC15
6	Temperature control loops, thermocouple	K-type (–200 to 1,300°C) J-type (–100 to 850°C)	0.1°C	0.5%	40 ms/point	31 mm	Basic I/O unit, setup by DIP switches, adjustable filtering 10/50/60 Hz	0.22	_	M3 Screwless	CJ1W-TS561 CJ1W-TS561(SL)
6	Temperature control loops	Pt100 (-200 to 650°C) Pt1000 (-200 to 650°C)	0.1°C	0.5%	40 ms/point	31 mm	Basic I/O unit, setup by DIP switches, adjustable filtering 10/50/60 Hz	0.25	_	M3 Screwless	CJ1W-TS562 CJ1W-TS562(SL)
2	Temperature control loops, thermocouple		0.25	-	M3	CJ1W-TC003					
2	Temperature control loops, thermocouple	B, J, K, L, R, S, T	0.1°C	0.3%	500 ms total	31 mm	Open collector PNP outputs	0.25	-	M3	CJ1W-TC004
2	Temperature control loops	*	0.1°C	0.3%	500 ms total		Open collector NPN outputs	0.25	-	M3	CJ1W-TC103
2	Temperature control loops	Pt100, JPt100	0.1°C	0.3%	500 ms total	31 mm	Open collector PNP outputs	0.25	-	M3	CJ1W-TC104

\*1. Accuracy for voltage and current inputs/outputs as percentage of full scale and typical value at 25°C ambient temperature (consult the operation manual for details) Accuracy for temperature inputs/outputs as percentage of process value and typical value at 25°C ambient temperature (consult the operation manual for details)

# CJ series special I/O units

Symbol	Channels	Туре	Signal type	Width				Connection type	Model
						5 V	24 V		
3	2	500 kHz Counter	24 V, line driver	31 mm	2 configurable digital inputs + outputs	0.28	-	Fujitsu	CJ1W-CT021
	4	100 kHz Counter	Line driver, 24 V		Target values trigger interrupt to CPU	0.32	-	1 × MIL (40 pt)	CJ1W-CTL41-E
			via terminal block						

# CJ series communication units

Symbol	Туре	Ports	Data transfer	Protocols	Width	Curren sumpti		Connection type	Model
						5 V	24 V		
3	Serial communications	2 × RS-232C	High-speed	CompoWay/F, host link,	31 mm	0.28	-	9 pin D-Sub	CJ1W-SCU22
	units	2 × RS-422A/RS-485		upper defined	31 mm	0.28	-	9 pin D-Sub	CJ1W-SCU32
		1 × RS-232C + 1 × RS-422/RS-485			31 mm	0.28	-	9 pin D-Sub	CJ1W-SCU42
	EtherNet/IP	1 × 100 Base-Tx	-	EtherNet/IP, UDP, TCP/ IP, FTP server, SNTP, SNMP	31 mm	0.41	-	RJ45	CJ1W-EIP21 <sup>*1</sup>
	DeviceNet	1 × CAN	-	DeviceNet	31 mm	0.29	-	5-p detachable	CJ1W-DRM21
	CompoNet	4-wire, data + power to slaves (Master)	-	CompoNet (CIP-based)	31 mm	0.4	-	4-p detachable IDC or screw	CJ1W-CRM21 <sup>*2</sup>
	PROFIBUS-DP	1 × RS-485 (Master)	-	DP, DPV1	31 mm	0.40	-	9 pin D-Sub	CJ1W-PRM21
		1 × RS-485 (Slave)	-	DP	31 mm	0.40	-		CJ1W-PRT21
	PROFINET-IO	1 × 100 Base-Tx	-	PROFINET-IO control- ler, FINS/UDP	31 mm	0.42	-	RJ45	CJ1W-PNT21
	RS-422A converter accessory	RS-232C to RS-422A/	RS-485 signal c	onverter. Mounts directly	on seria	l port	•	9 pin D-Sub to screw clamp terminals	CJ1W-CIF11

\*1. Supported only by the EtherNet/IP units with unit version 2.1 or later, CPU units with unit version 1.01 or later and the Sysmac Studio version 1.02 or higher. \*2. Supported only by the CPU units with unit version 1.01 or higher and the Sysmac Studio version 1.02 or higher.

# CJ series ID sensor units

Symbol	Туре	Specifications		Current sumptic		Model		
					No. of unit numbers allocated	5 V	24 V	
3	ID sensor units	V680-Series RFID	1	Not required	1	0.26 <sup>*1</sup>	0.13 <sup>*1</sup>	CJ1W-V680C11
		system	2		2	0.32	0.26	CJ1W-V680C12

<sup>\*1.</sup> To use a V680-H01 antenna, refer to the V680 Series RFID system catalog (Cat. No. Q151)

Note: The data transfer function using intelligent I/O commands can not be used.

#### Expansion racks

### CJ series I/O control unit (mounted on CPU rack when connecting expansion racks)

Symbol	Name	Connecting cable	Connected Unit	Width	Current consumption (A)		Model
					5 V	24 V	
4	CJ-Series I/O control unit	CS1W-CND3	CJ1W-II101	20 mm	0.02 A	_	CJ1W-IC101

Note: Mount to the right of the power supply unit.

# CJ series I/O interface unit (mounted on expansion rack)

Symbol	Name	Connecting cable	Width	Current consumption (A)		Model
				5 V	24 V	
5	CJ-Series I/O interface unit	CS1W-CN	31 mm	0.13 A	-	CJ1W-II101

Note: Mount to the right of the power supply unit.

#### I/O connecting cables

Symbol	Name	Specifications		Model
6 I/O connecting cable	Connects an I/O control unit on NJ series CPU rack to an I/O interface unit on a	Cable length: 0.3 m	CS1W-CN313	
		or • Connects an I/O interface unit on NJ series expansion rack to an I/O interface unit	Cable length: 0.7 m	CS1W-CN713
			Cable length: 2 m	CS1W-CN223
	on another NJ series expansion rack.		Cable length: 3 m	CS1W-CN323
		Cable length: 5 m	CS1W-CN523	
			Cable length: 10 m	CS1W-CN133
			Cable length: 12 m	CS1W-CN133-B2

# EtherCAT junction slave

Symbol			voltage	Current consumption (A)	Dimensions (W × D × H)	Weight	Model	Appearance
7	EtherCAT junction slave		20.4 to 28.8 VDC (24 VDC -15 to 20%)	0.08	25 mm × 78 mm × 90 mm	165 g	GX-JC03	
		6		0.17	48 mm × 78 mm × 90 mm	220 g	GX-JC06	110

 Note:
 1. Please do not connect EtherCAT junction slave with OMRON position control unit, Model CJ1W-NC\_81/\_82.
 2. EtherCAT junction slave cannot be used for Ethernet/IP and Ethernet.

# Industrial switching hubs

Symbol	Specifications	Accessories C	Current	Model	Appearance		
			Failure detection		consump- tion (A)		
8	Quality of Service (QoS): EtherNet/IP control				0.08	W4S1-03B	
	data priority.		No		0.12	W4S1-05B	
	Failure detection: Broadcast storm and LSI error detection 10/100 BASE-TX, Auto-Negotiation	5		Power supply connector and connector for informing error	0.12	W4S1-05C	

# **Recommended EtherCAT and EtherNet/IP communication cables**

Symbol	Item				Colour	Cable length (m)	Model					
9	Ethernet	Cat 6a, AWG27, 4-pair cable	Standard type	OMRON	Yellow	0.2	XS6W-6LSZH8SS20CM-Y					
	patch cable	Cable sheath material: LSZH <sup>*1</sup>	<sup>1</sup> Cable with connectors on both ends (RJ45/RJ45)			0.3	XS6W-6LSZH8SS30CM-Y					
		News This sale is such that is	ends (RJ45/RJ45)			0.5	XS6W-6LSZH8SS50CM-Y					
		<b>Note:</b> This cable is available in yellow, green and blue colours.				1	XS6W-6LSZH8SS100CM-Y					
		yellow, green and blue colours.				1.5	XS6W-6LSZH8SS150CM-Y					
						2	XS6W-6LSZH8SS200CM-Y					
						3	XS6W-6LSZH8SS300CM-Y					
						5	XS6W-6LSZH8SS500CM-Y					
						7.5	XS6W-6LSZH8SS750CM-Y					
						10	XS6W-6LSZH8SS1000CM-Y					
						15	XS6W-6LSZH8SS1500CM-Y					
						20	XS6W-6LSZH8SS2000CM-Y					
					Green	0.2	XS6W-6LSZH8SS20CM-G					
						0.3	XS6W-6LSZH8SS30CM-G					
						0.5	XS6W-6LSZH8SS50CM-G					
						1	XS6W-6LSZH8SS100CM-G					
						1.5	XS6W-6LSZH8SS150CM-G					
						2	XS6W-6LSZH8SS200CM-G					
						3	XS6W-6LSZH8SS300CM-G					
						5	XS6W-6LSZH8SS500CM-G					
						7.5	XS6W-6LSZH8SS750CM-G					
						10	XS6W-6LSZH8SS1000CM-G					
						15	XS6W-6LSZH8SS1500CM-G					
						20	XS6W-6LSZH8SS2000CM-G					
		Cat 5, AWG26, 4-pair cable	Standard type		Green	0.5	XS6W-5PUR8SS50CM-G					
		Cable sheath material: PUR*1	Cable with connectors on both			1	XS6W-5PUR8SS100CM-G					
			ends (RJ45/RJ45)			1.5	XS6W-5PUR8SS150CM-G					
			-0	-0							2	XS6W-5PUR8SS200CM-G
							3	XS6W-5PUR8SS300CM-G				
			*			5	XS6W-5PUR8SS500CM-G					
						7.5	XS6W-5PUR8SS750CM-G					
						10	XS6W-5PUR8SS1000CM-G					
						15	XS6W-5PUR8SS1500CM-G					
						20	XS6W-5PUR8SS2000CM-G					
		Cat5, AWG22, 2-pair cable	Rugged type	-	Grey	0.3	XS5W-T421-AMD-K					
		,,	Cable with connectors on both			0.5	XS5W-T421-BMD-K					
			ends (RJ45/RJ45)			1	XS5W-T421-CMD-K					
			A			2	XS5W-T421-DMD-K					
			-0			3	XS5W-T421-EMD-K					
			~0			5	XS5W-T421-GMD-K					
						10	XS5W-T421-JMD-K					
						15	XS5W-T421-KMD-K					
			Rugged type	-	Grey	0.3	XS5W-T421-AMC-K					
	1		Cable with connectors on both		<i>,</i>	0.5	XS5W-T421-BMC-K					
	1		ends (M12 straight/RJ45)			1	XS5W-T421-CMC-K					
						2	XS5W-T421-DMC-K					
	1		-0			3	XS5W-T421-EMC-K					
		-0			5	XS5W-T421-GMC-K						
	1					10	XS5W-T421-GMC-K XS5W-T421-JMC-K					
	1					10	XS5W-T421-JMC-K XS5W-T421-KMC-K					
				1	L	15	703WF1421-NWO-N					

Symbol	Item			Manufacturer	Colour	Cable length (m)	Model
9	Ethernet		Cable with connectors on both	OMRON	Grey	0.3	XS5W-T422-AMC-K
	patch cable					0.5	XS5W-T422-BMC-K
			ends (M12 L right angle/RJ45)			1	XS5W-T422-CMC-K
		-0-	18			2	XS5W-T422-DMC-K
						3	XS5W-T422-EMC-K
					5	XS5W-T422-GMC-K	
					10	10	XS5W-T422-JMC-K
					15	XS5W-T422-KMC-K	
	Ethernet installation			Weidmüller	Green	100	WM IE-5IC4x2xAWG24/1-PUR
	cable				Green	100	WM IE-5IC4x2xAWG26/7-PUR
	Connectors	RJ45 metallic connector For AWG22 to AWG26	se la companya de la		-	-	WM IE-T0-RJ45-FH-BK
1		RJ45 plastic connector For AWG22 to AWG24	2	OMRON	-	-	XS6G-T421-1
	RJ45 socket	DIN-rail mount socket to termir cabinet	nate installation cable in the	Weidmüller	-	-	WM IE-T0-RJ45-FJ-B

\*1. The lineup features low smoke zero halogen cables for in-cabinet use and PUR cables for out-of-cabinet use.

Note: Please be careful while cable processing, for EtherCAT, connectors on both ends should be shield connected and for EtherNet/IP, connectors on only one end should be shield connected.

# WE70 FA wireless LAN units

Name	Area	Туре	Model	Appearance
WE70 FA wireless LAN units	Europe	Access point (Master)	WE70-AP-EU	
		Client (Slave)	WE70-CL-EU	
Directional magnetic-base antenna		1 set with two antennas, 2.4 GHz/5 GHz Dual-band compatible	WE70-AT001H	
DIN rail mounting bracket		For TH35 7.5	WT30-FT001	
		For TH35 15	WT30-FT002	
Antenna extension cable		5 m	WE70-CA5M	9

Note: Special versions are available for USA, Canada, China and Japan.

#### NJ series options and accessories

Specifications		Model	Appearance
SD memory card	2 GB	HMC-SD291	WRC-Sp297
	4 GB	HMC-SD491	2GB
DIN track	Length: 0.5 m; height: 7.3 mm	PFP-50N	
	Length: 1 m; height: 7.3 mm	PFP-100N	
	Length: 1 m; height: 16 mm	PFP-100N2	
End plate to secure the units on the DIN track (2 pieces	are included with the CPU unit and I/O interface unit)	PFP-M (2 pcs)	Star Star
Battery for NX7/NJ CPU unit (The battery is included wi	CJ1W-BAT01		
End cover (The end cover is included with each CPU ur	it and I/O interface unit)	CJ1W-TER01	

#### **Computer software**

Symbol	Specifications		Model
J	Sysmac Studio <sup>*1*2</sup>		SYSMAC-SE2
		Software to make HSMS, SECSII and GEM settings for the NJ501 CPU units with SECS/GEM communications	WS02-GCTL1

\*1. For the NJ501-1340 CPU unit, Sysmac Studio version 1.11 or higher is needed.

<sup>\*2.</sup> For the NJ101 CPU units, Sysmac Studio version 1.13 or higher is needed.

<sup>\*3.</sup> SECS/GEM configurator files are included in the Sysmac Studio standard edition DVD.

### ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Cat. No. SysCat\_I180E-EN-05 In the interest of product improvement, specifications are subject to change without notice.